




# 6TH GEN BRONCO REAR OVERHEAD MOLLE PANEL

## INSTALL INSTRUCTIONS

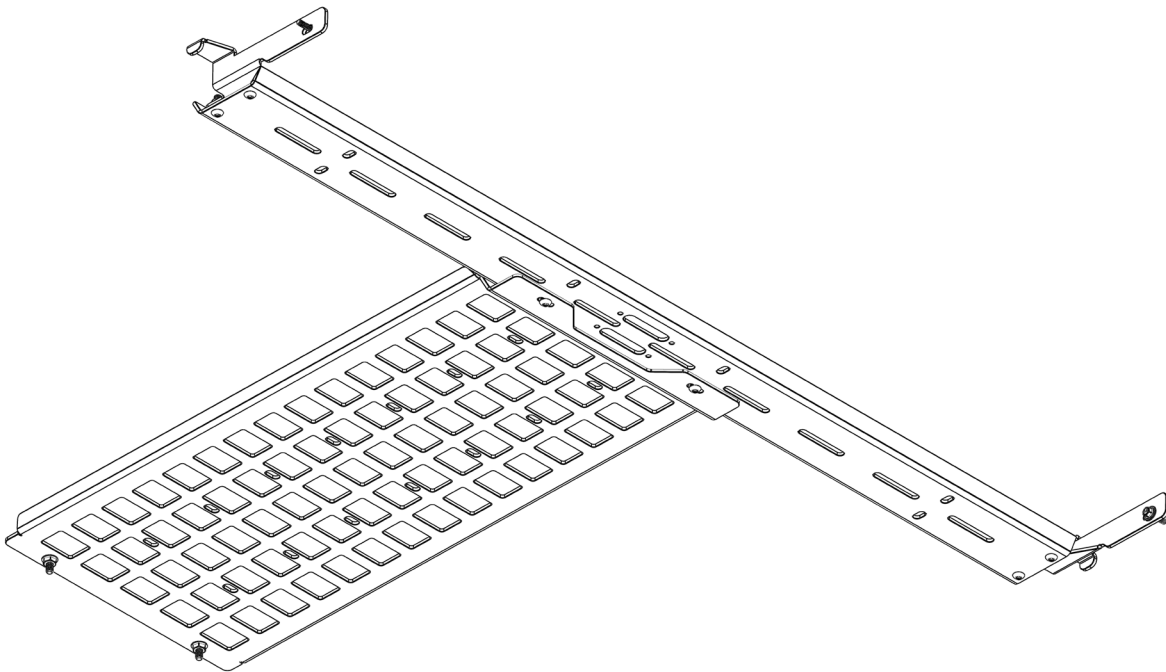


**Please read the mounting instructions below carefully before attempting to install.**

**Be sure to check out the install video on the product page, if available.**

Thank you for purchasing from JcROffroad! Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!


# INCLUDED HARDWARE

4x

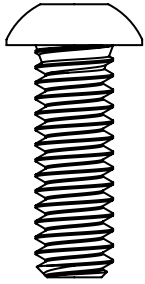

1/4"-20 X 3/4"  
Button Head


4x

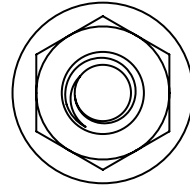

1/4"-20  
Flange Nut


# INCLUDED PARTS

1x

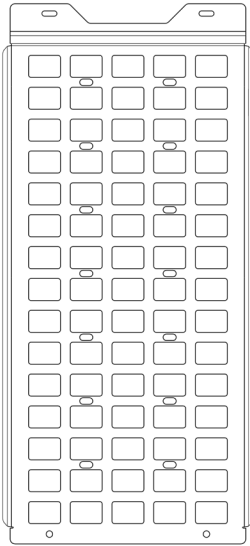

# ASSEMBLY

- 1** To start, gently place the rear edge of the panel on the top of the roll bar and loosely bolt the front into the bottom of the Overhead MOLLE Panel crossmember using the 1/4" hardware provided. The stepped side is the front and should step down towards the front of the vehicle.

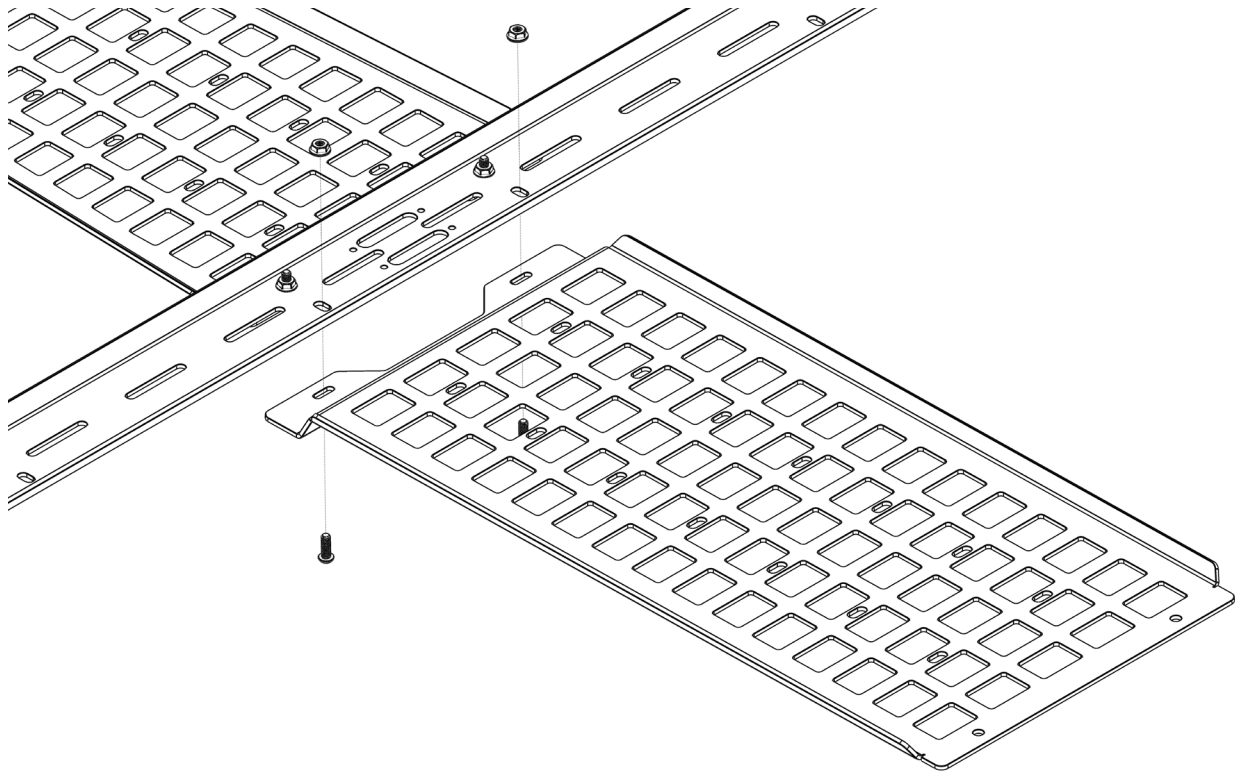

- 2** Next, find a point on the roll bar on each side of the panel to measure from to make sure that the panel is centered. Once it is, hold it in place and tighten down the front bolts.

# ASSEMBLY

- 3** Once the panel is held in place, you will need to drop the plastic trim just a little bit from the bottom of the roll bar. To do this, pop out the plastic clip from the back of the roll bar and then pull down on the plastic trim to pop it out of some of its clips and drop it out of the way. This will allow you to install nuts after drilling. With the plastic out of the way, go ahead and drill a 1/4" hole in the roll bar at each of the holes in the panel. Make sure not to drill too deep. A drill stop is helpful for this.
- 4** Next, bolt the rear edge of the panel into the roll bar using the provided 1/4" hardware. The button heads should go down through the top. Once the panel is fully installed, go ahead and reinstall the plastic on the bottom of the roll bar.

