

# JK FRONT FENDER DELETE INSTALLATION INSTRUCTIONS

## TOOLS NEEDED

- 3/16 Allen Wrench
- 1/2 Socket or wrench
- 10mm Socket
- Flat head screwdriver
- 3/8 Drill Bit
- 1/4 Drill Bit
- Drill
- Utility Knife

## HARDWARE

- 16 - 5/16 X 3/4 Button Head
- 16 - 5/16 Flange Nut

**Please read the mounting instructions below  
carefully before attempting to install.**


Thank you for purchasing your new front fender flares from JcR Offroad! Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!

It is always best to trial install before painting/finishing to ensure proper fit. If using a bed liner type product, you may need to use a drill or file to open holes or openings to the proper size. Be sure to keep any and all paint or bed liner products away from all threads.

## **1 Unplug the side marker light from the wiring harness.**



## **2 Using the 10mm socket and flat head screw driver, remove the bolts and clips for the inner fender liner. Remove the inner fender liner. If you have the JcrOffroad Front Inner Fender Kit, you can dispose of the stock liner. If you did not purchase the JcrOffroad Front Inner Fender Kit, then place the stock liner to the side for later installation.**

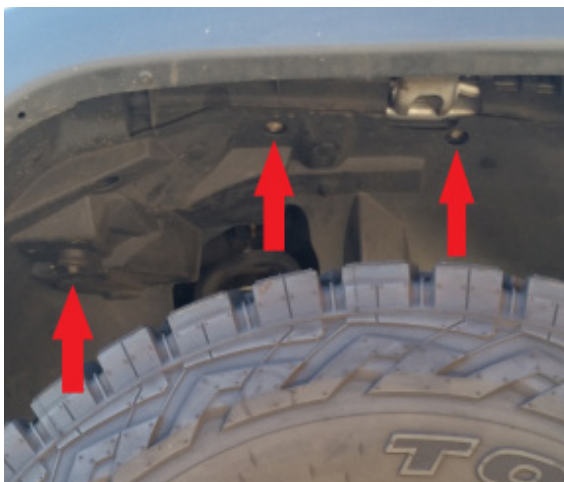

- 3** Using the 1/4 drill bit, drill and flat head screwdriver, remove the clips and bolts holding the fender in place. Then drill out the plastic rivets along the outside edge that are holding the fender to the inner supports. Remove the stock fender.



- 4** Wipe down clean the mounting area. This is how your JK should look after everything is removed.



- 5** If you did not purchase the JcrOffroad Front Inner Fender Kit, now you will need to mark and trim your stock inner fender liners. Using the front and rear mounting bolts, reinstall the liners. Using a marker, mark where the liner sticks out from the body. Remove the liners and cut them where you have marked using a utility knife.

- 6** Place the Fender Delete plate into place and line up the mounting holes for the front fender. Use the included 5/16 button head bolts and flange nuts to loosely mount the Fender Deletes. You may need to use a 1/2 wrench to hold the flange nuts in place.



- 7** Once all the hardware has been installed, tighten all the bolts down.



- 8** That's it, take those JK Front Fender Deletes out and show them off!

# JKFX-D - FRONT FENDER DELETES - JK WRANGLER

## Item Code Legend

EX: JKFX-D-PC

-PC : Powder-coated

-BARE : Bare Metal



Passenger Side



Drivers Side

## Bolt Pack:

JKFX-D-BP:

- 16 - 5/16 X 3/4 Button Head
- 16 - 5/16 Flange Nut

Revised: 02/05/16