



JK CLASSIC SLIDERS INSTALLATION INSTRUCTIONS

TOOLS NEEDED

- 10mm wrench or socket
- 13mm socket
- 18mm socket
- 1/2" wrench
- 3/16 allen wrench or socket
- 3/8 drill bit (Optional)

HARDWARE

- 5/16" x 5/8" Button Head (12)
- 5/16 Flange Nuts (12)

**Please read the mounting instructions below
carefully before attempting to install.**

Thank you for purchasing your new sliders from JcR Offroad!
Checkout our website, www.jcroffroad.com for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184 x20!

It is always best to trial install before painting/finishing to ensure proper fit. If using a bed liner type product, you may need to use a drill or file to open holes or openings to the proper size.

- 1** If equipped, remove the factory Rubicon rails with a 10mm socket or wrench. Remove the 6 bolts that come through the back of the pinch seam. Next remove the 3 bolts holding the rails to the bottom of the tub with a 13mm socket.



- 2** Once you remove the factory rails. If you're feeling lucky, you can try your hand at selling them to get some extra cash for your next Jeep project.



- 3** With the rails removed, use an 18mm socket and remove the 3 body mount bolts if working on a 4 door, or 2 if you're working on a JK 2 door. You might have to apply a little pressure to get them to let loose from the body.




- 4** With help from a friend, position the slider into place and loosely install the outer body mounts. If working on a four door JK do not install the middle body mount bolt just yet.



- 5** If working on a four door, hold the slider up against the pinch seam and install the six button head bolts and nuts. If working with a two door JK, you will install four of the button head bolts and nuts on each side. Once they are all in place, use a 3/16" Allen head wrench or socket, and a 1/2 wrench to tighten down all the bolts. Some of the pinch seam holes may need be drilled out with a 3/8 drill bit.



- 6** If you're working on a four door JK, now is the time to install the middle body mount bolt. Once this is done, go back through and tighten down everything you might have missed.

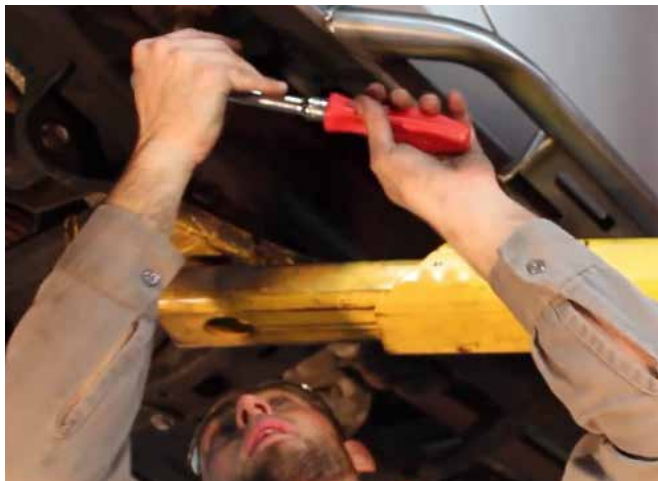

- 7** Now It's Time To Enjoy Your New JcrOffroad Classic Sliders

JKSL-CL - CLASSIC ROCK SLIDERS - JK WRANGLER

Item Code Legend

EX: JKSL-CL-4D-PC

-2D : Two Door

-4D : Four Door

-PC : Powdercoated

-BARE : Bare Metal



Two (2) Door



Four (4) Door

Bolt Pack:

JKSL-CL-BP:

- 12 - 5/16 X 3/4 Button Head
- 12 - 5/16 Flange Nut