




# 6TH GEN BRONCO PINCH WELD COVERS

## INSTALL INSTRUCTIONS

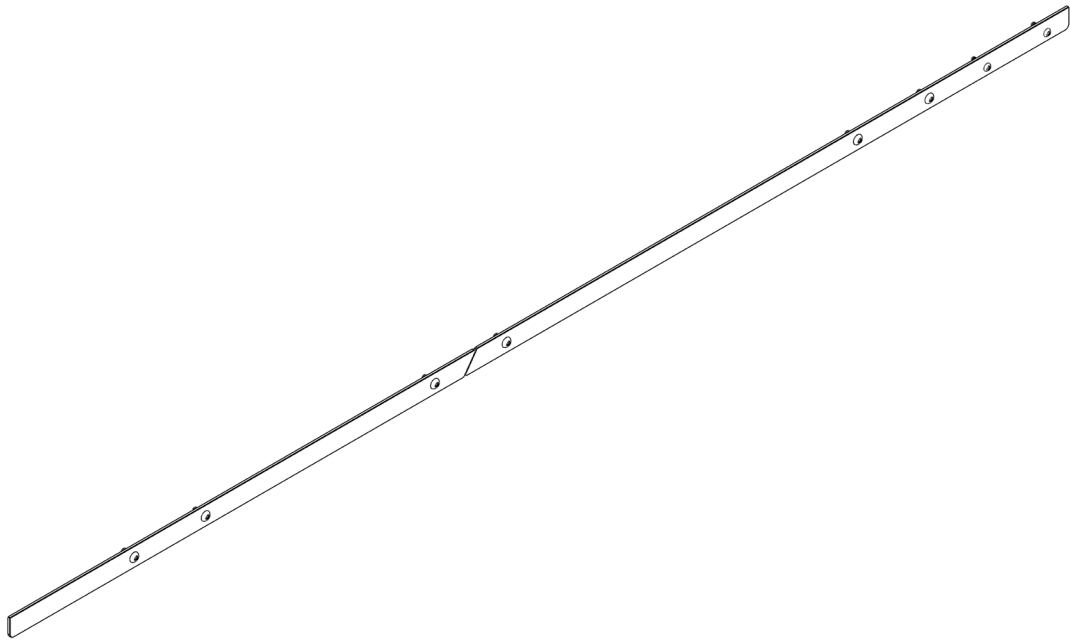

**Please read the mounting instructions below carefully before attempting to install.**


**Be sure to check out the install video on the product page, if available.**

Thank you for purchasing from JcROffroad! Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!

# INCLUDED HARDWARE

## 4 DOOR

12x

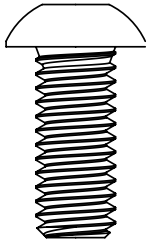


5/16"-18 X 3/4"  
Button Head

4x



25mm M6  
Button Head


12x

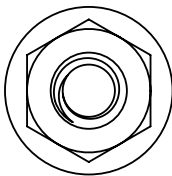

5/16"-18  
Serr. Flange Nut


## 2 DOOR

8x

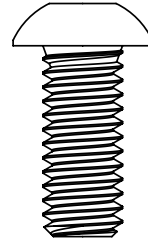


5/16"-18 X 3/4"  
Button Head

4x

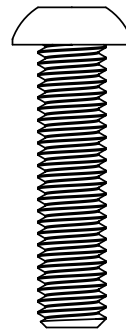

25mm M6  
Button Head

8x

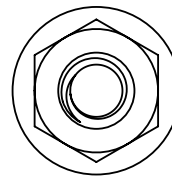

5/16"-18  
Serr. Flange Nut


# INCLUDED PARTS

4 DOOR

2x



2x



2 DOOR


2x



# ASSEMBLY

- 1** To start, remove the two bolts in the front of the pinch seam on both sides of the vehicle.
- 2** To install, simply place the metal plates onto the outside of the pinch seam and bolt them on using the provided hardware. The M6 bolts go in the two front most holes that you removed the factory bolts from. The 5/16"-18 X 3/4" and 5/16"-18 serr. flange nuts are used in all of the other holes.

## 4 DOOR

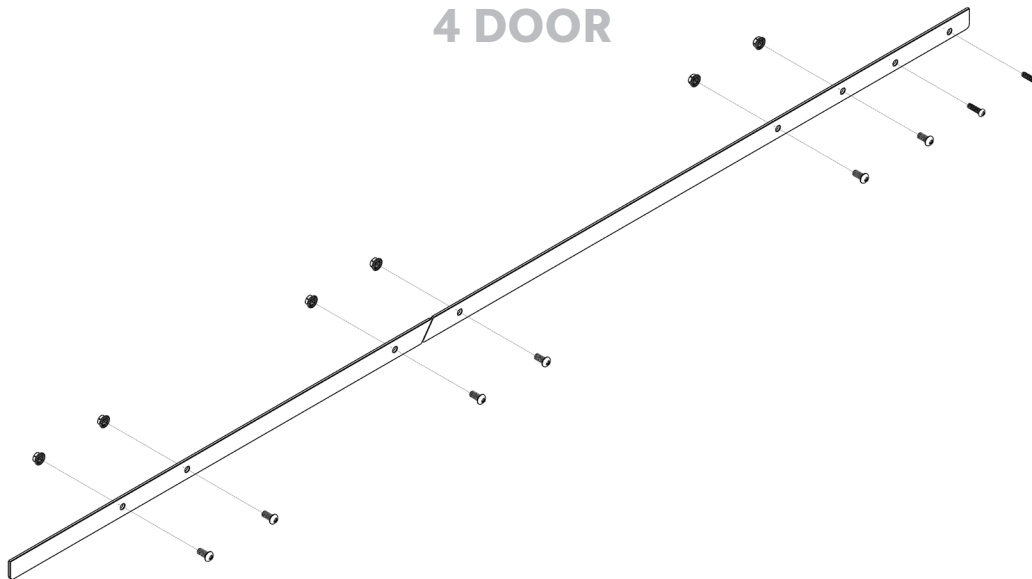

## 2 DOOR

