




# JT BED FRONT MOLLE PANEL

## INSTALL INSTRUCTIONS

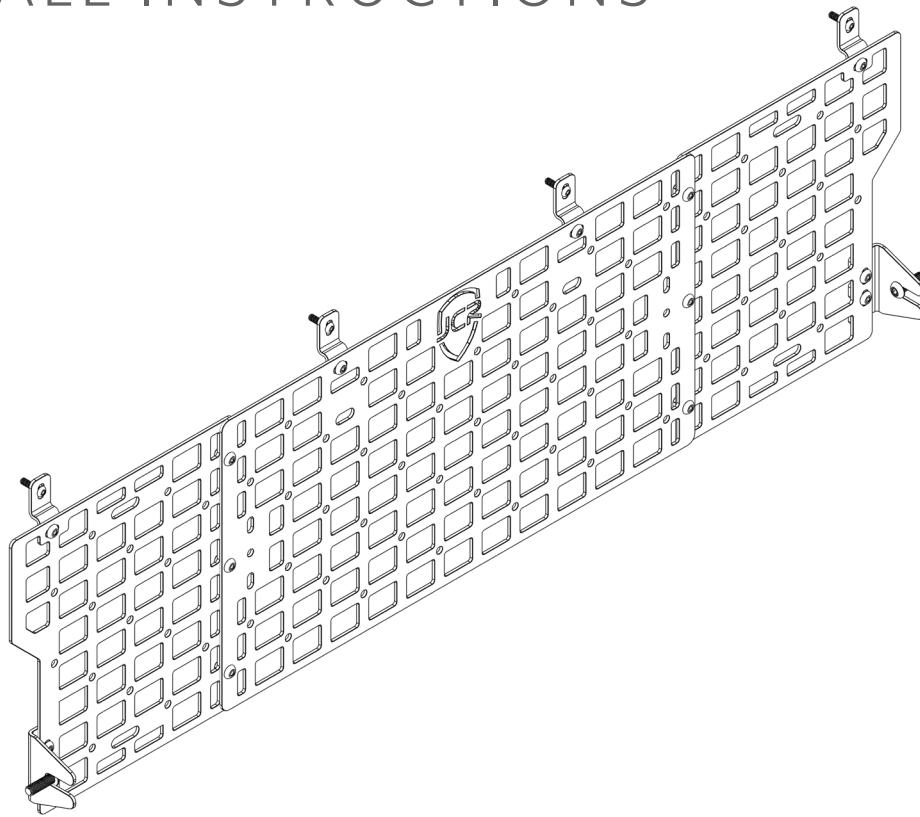


**Please read the mounting instructions below carefully before attempting to install.**

**Be sure to check out the install video on the product page, if available.**

Thank you for purchasing from JcRoffroad! Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!


# INCLUDED HARDWARE

14x

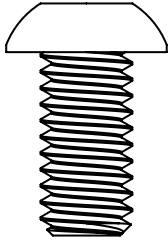


5/16"-18 X 5/8"  
Button Head

4x

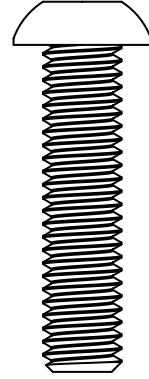

25mm M6  
Button Head


14x

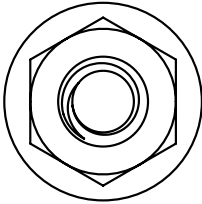


5/16"-18  
Serr. Flange Nut

# INCLUDED PARTS

1x

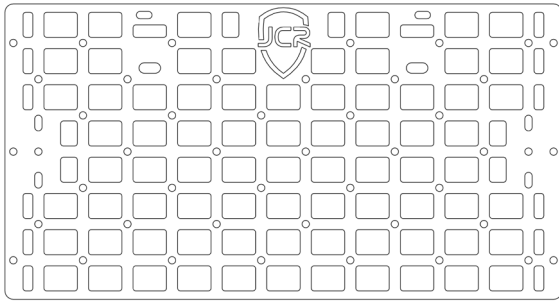


2x

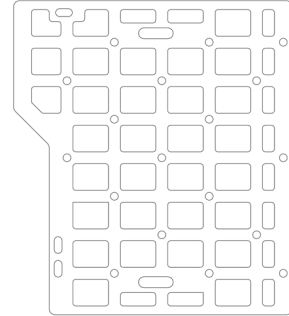

4x




2x

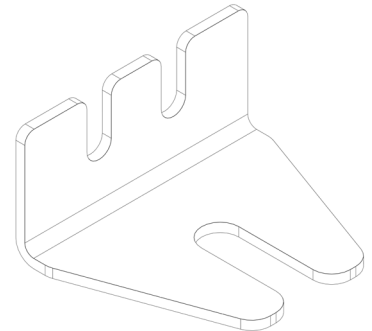


# ASSEMBLY

- 1 Start by attaching the MOLLE panels together using the 5/16"-18 X 5/8" bolts and 5/16"-18 serr. flange nuts. It doesn't matter which panel goes on top of the other, that is up to your preference. Just make sure that the middle panel is flipped so that the JCR logo is legible, and the side panels are flipped so that the cut out portion is on the outside, bottom corners. Now is the best time to attach any mounts you plan on using to the panels because it can be hard to access the back of the panels once they are installed.

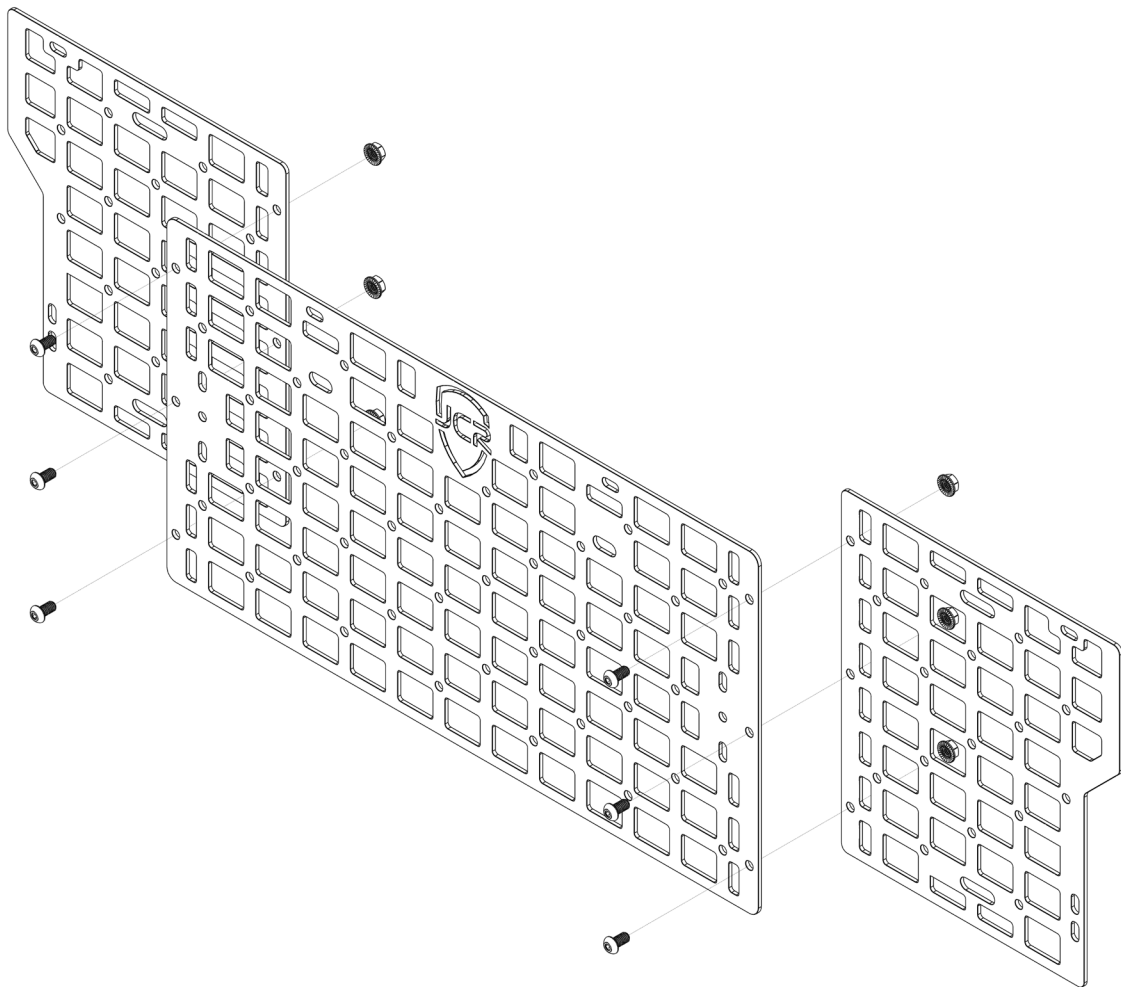


# ASSEMBLY

- 2** Next, loosely attach the side mounts to the back of the side panels using the 5/16"-18 X 5/8" bolts and 5/16"-18 serr. flange nuts. Make sure that the side with the two slots is against the back of the panel and the side with the one slot is sticking out towards the tailgate. Then, remove the small swiveling tie down rings by the front of the bed from both sides. These will be used later to fasten the panels into place.

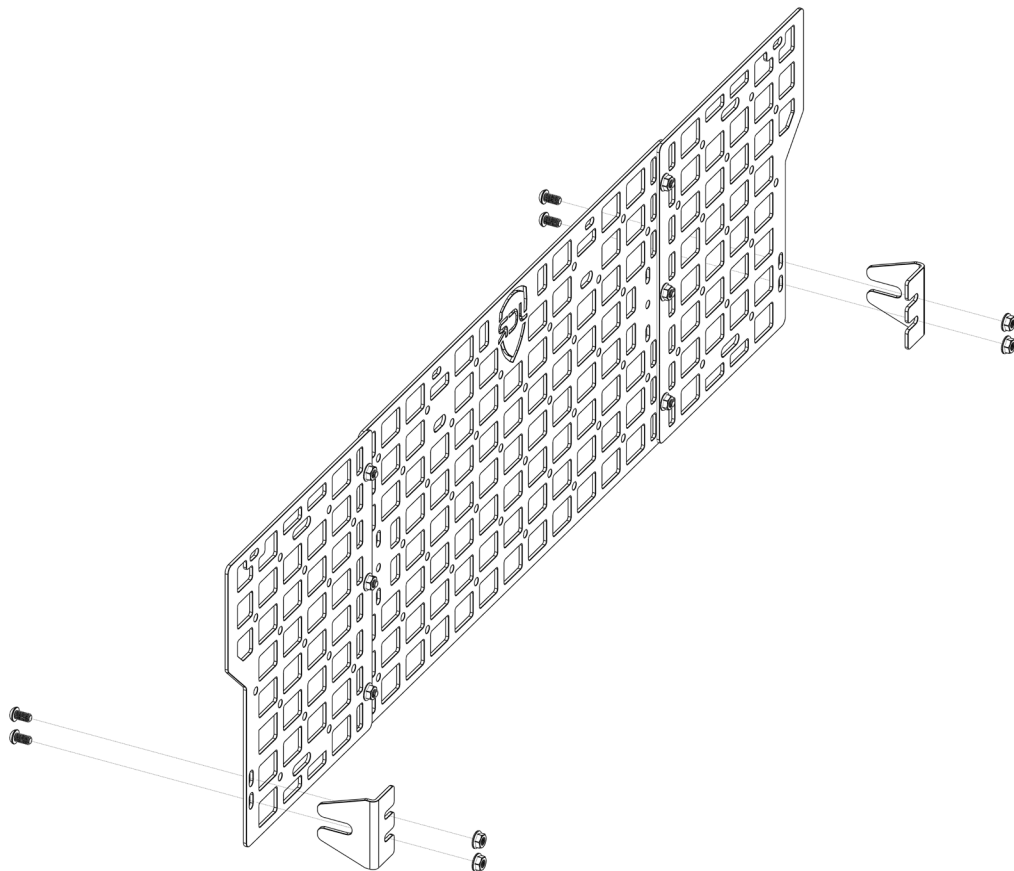


# ASSEMBLY

- 3** Next, loosely mount the four top mounts to the holes in the front of the bed. If you do not have the trail rail, you can simply fasten them into place using the provided 25mm M6 bolts. If you do have the trail rail, you will need to remove it and then reinstall it with one of the mounts behind each of the four holes in it using the factory hardware. The slotted end is what gets bolted into the bed.
- 4** Once the brackets are in place, loosely mount the MOLLE panel to them using the 5/16"-18 X 5/8" bolts and 5/16"-18 serr. flange nuts.

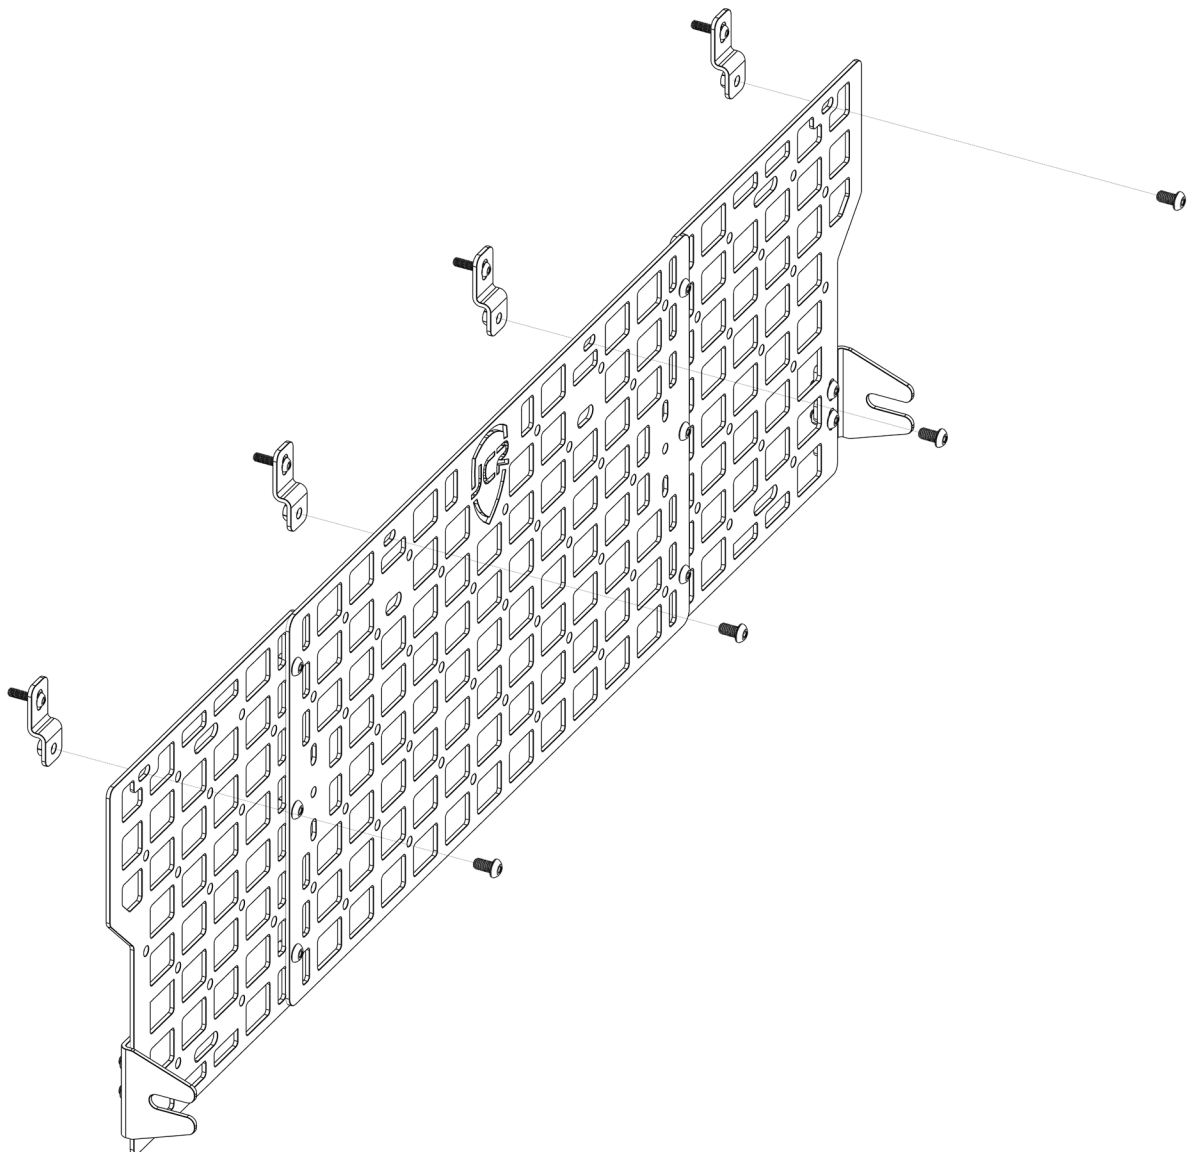

# ASSEMBLY

- 5** Next, reinstall the tie down rings with the side mounts between the washer on the tie down bolt and the bed. Leave it loose for now.

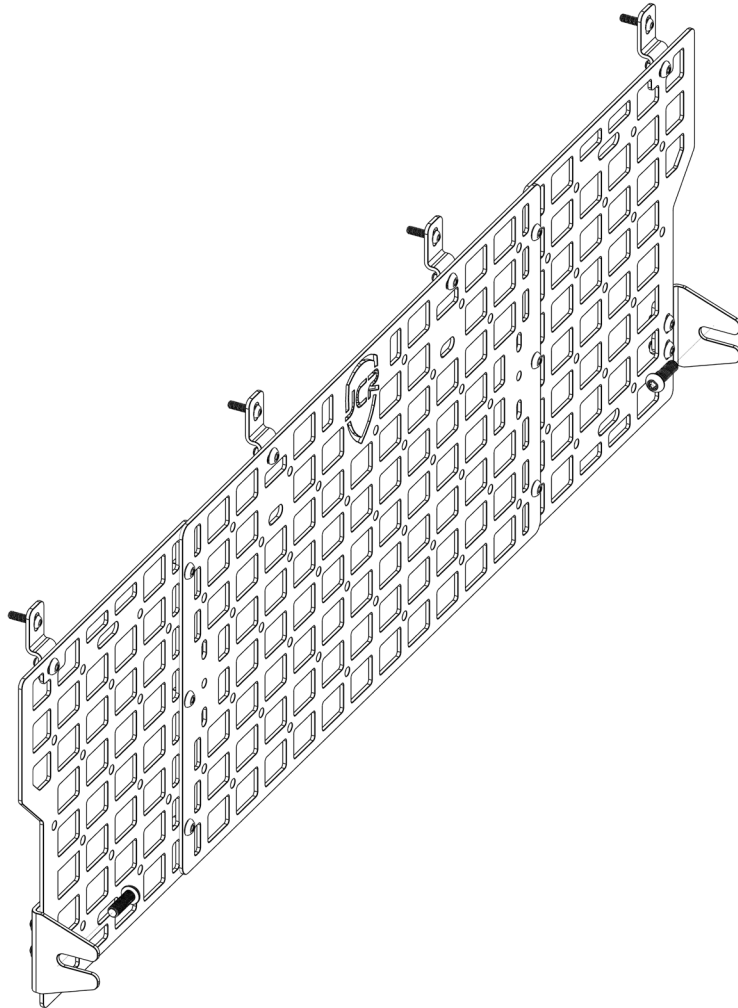

- 6** Finally, with everything roughly in place, position the panels however you would like them and go back and tighten all the bolts that were left loose. Try to keep the panels as close to vertical as possible.