




# JT UNDERSEAT MOLLE STORAGE BASKET

## INSTALL INSTRUCTIONS

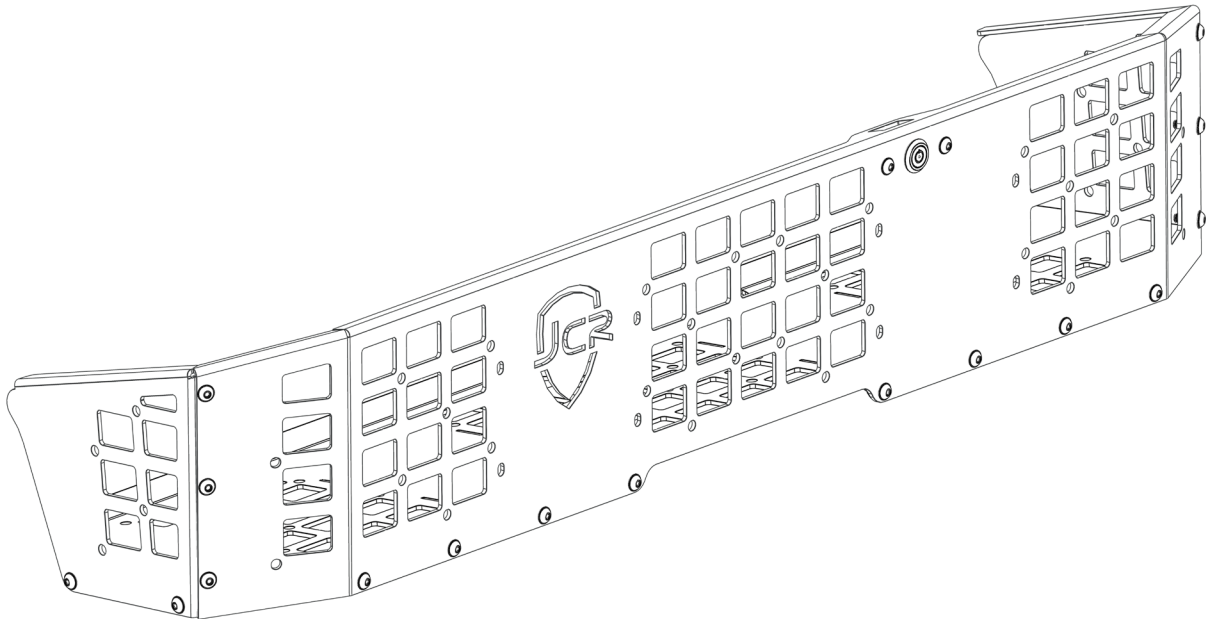


**Please read the mounting instructions below carefully before attempting to install.**

**Be sure to check out the install video on the product page, if available.**


Thank you for purchasing from JcR Offroad! Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!

# INCLUDED HARDWARE


8x

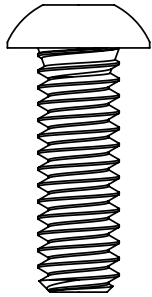


1/4"-20 X 3/4"  
Button Head

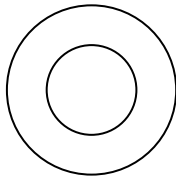


1/4"  
Washer

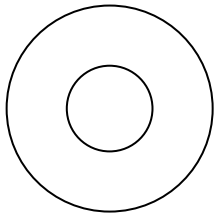

1/4"  
USS Washer

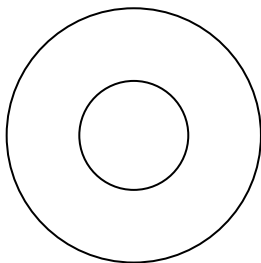


5/16"  
USS Washer

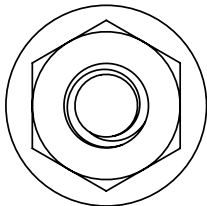


1/4"-20  
Serr. Flange Nut


8x

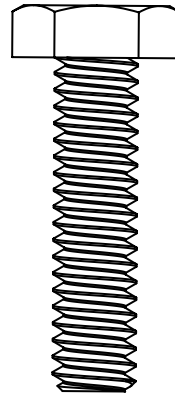


1/4"-20 X 1"  
Hex Head

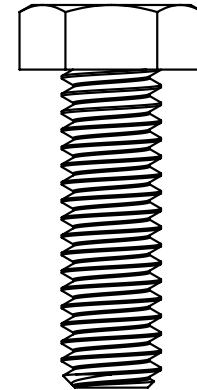

5/16"-18 X 1"  
Hex Head

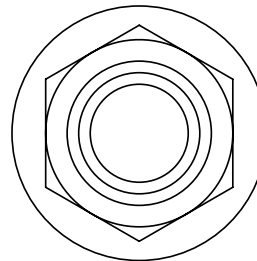


5/16"-18  
Flanged Nylock Nuts

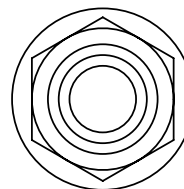


1/4"-20  
Flanged Nylock Nuts

# INCLUDED PARTS


1x

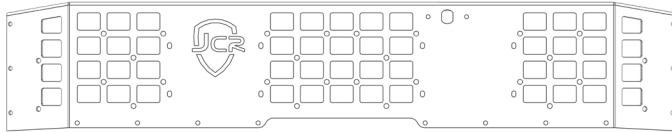


1x

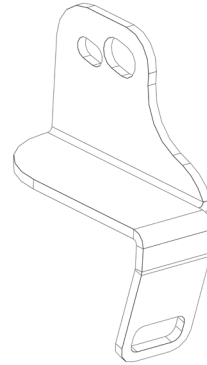


1x

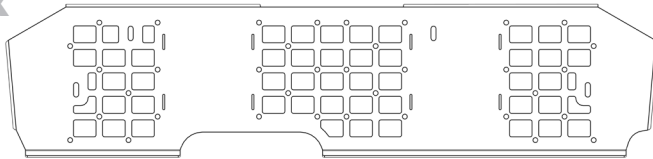


1x

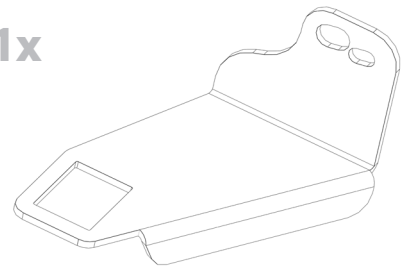


1L/1R

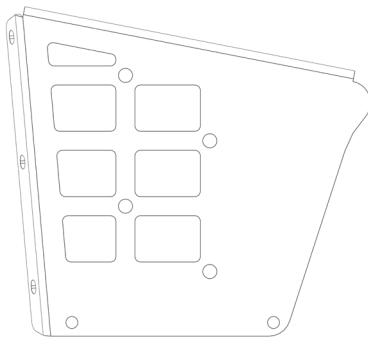

1x

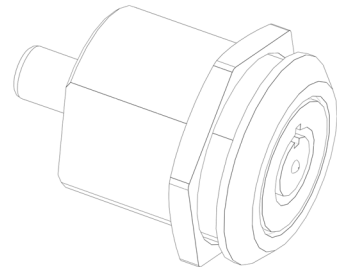


1x

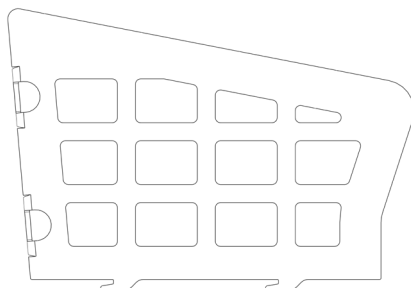


# ASSEMBLY

- 1** Start by attaching the lock to the front panel of the basket. Simply insert the lock through the hole, making sure it is right side up, and then put the nut on the other side to secure it in place.

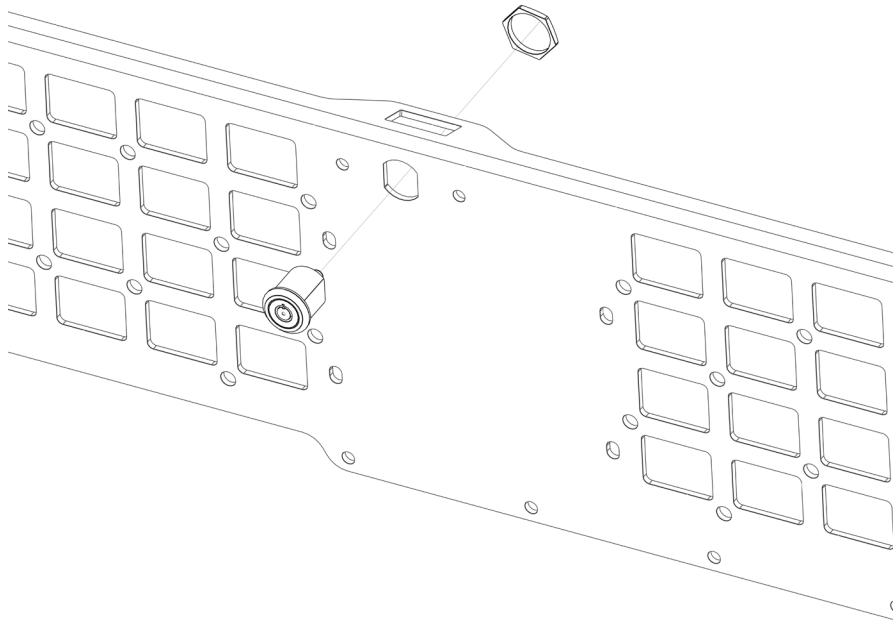


- 2** Next, attach the small bracket that goes behind the lock using two 1/4"-20 X 3/4" bolts, 1/4" washers and 1/4"-20 serr. flange nuts.

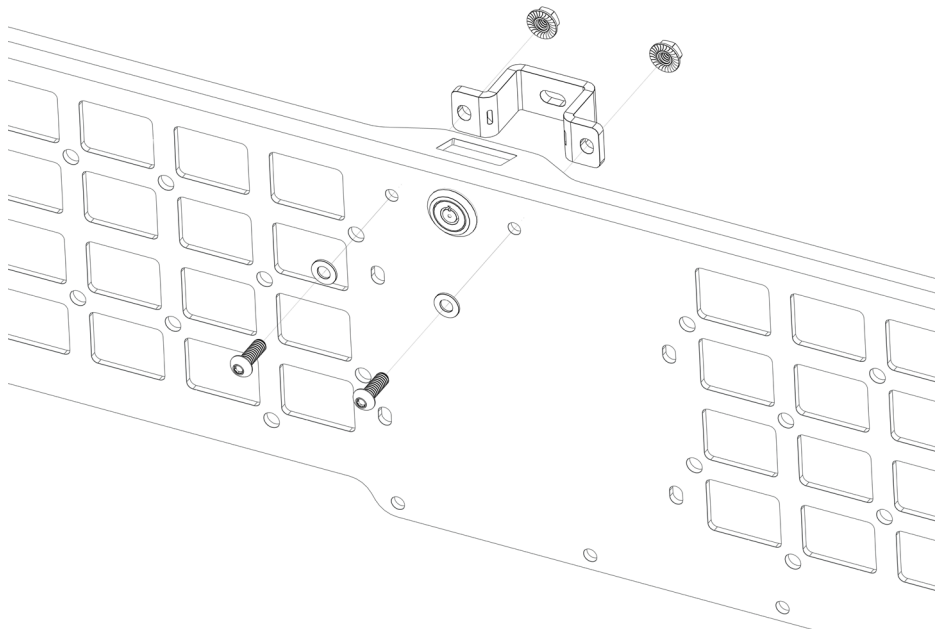


# ASSEMBLY

- 3** Next, Mount both side panels to the sides of the front panel using three 1/4"-20 X 3/4" bolts, 1/4" washers and 1/4"-20 serr. flange nuts on each side. Leave the bolts a little loose for now in order to make attaching the bottom panel easier.

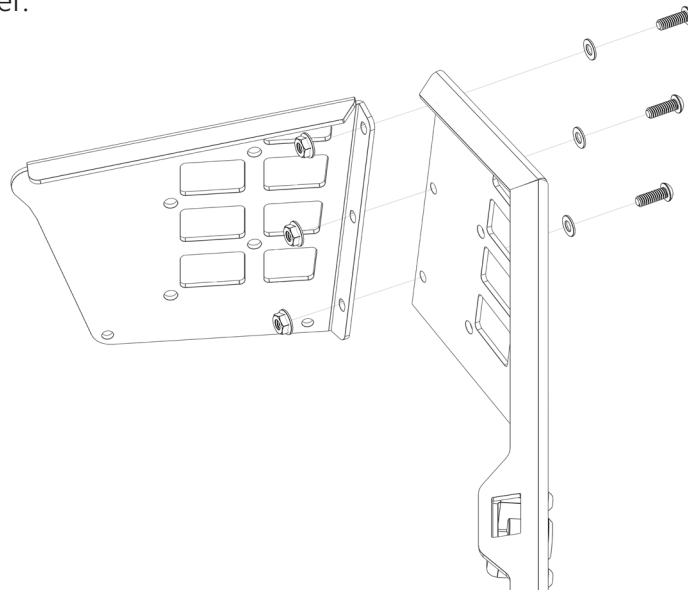


- 4** Now, attach the bottom panel using the 1/4"-20 X 3/4" bolts, 1/4" washers and 1/4"-20 serr. flange nuts. Once you have all bolts started, go back and tighten them all up. Tighten the side panels fully into place at this time as well.

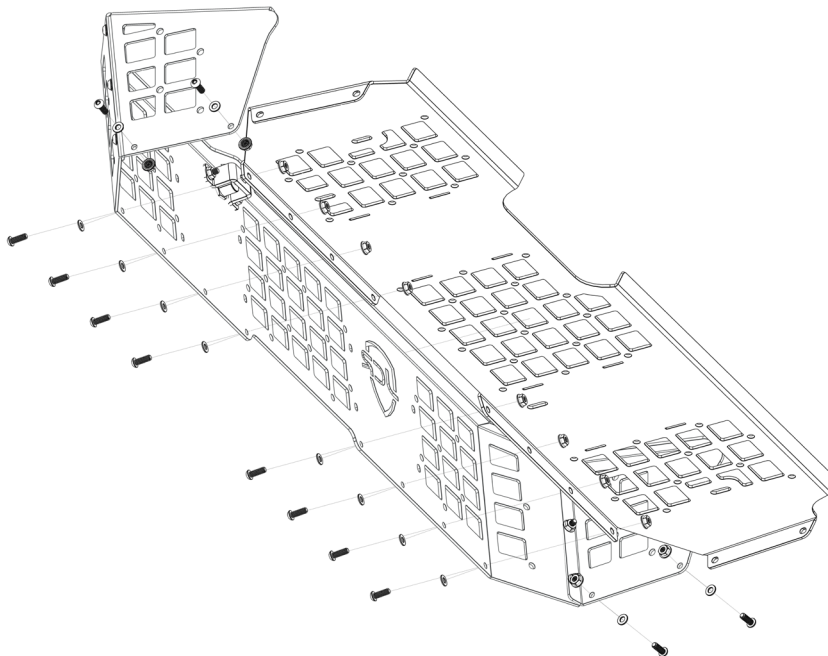

# ASSEMBLY

- 5** With the basket assembled, you can now decide if you want to use the divider. If you decide you do want to use it, there are several mounting locations for it. It can go in any of the long thin slots on the bottom panel. Once you decide where you want it, slip the tabs in the bottom of the divider into the slots in the bottom panel and then attach it to the front panel using two 1/4"-20 X 3/4" bolts, 1/4" washers and 1/4"-20 serr. flange nuts.

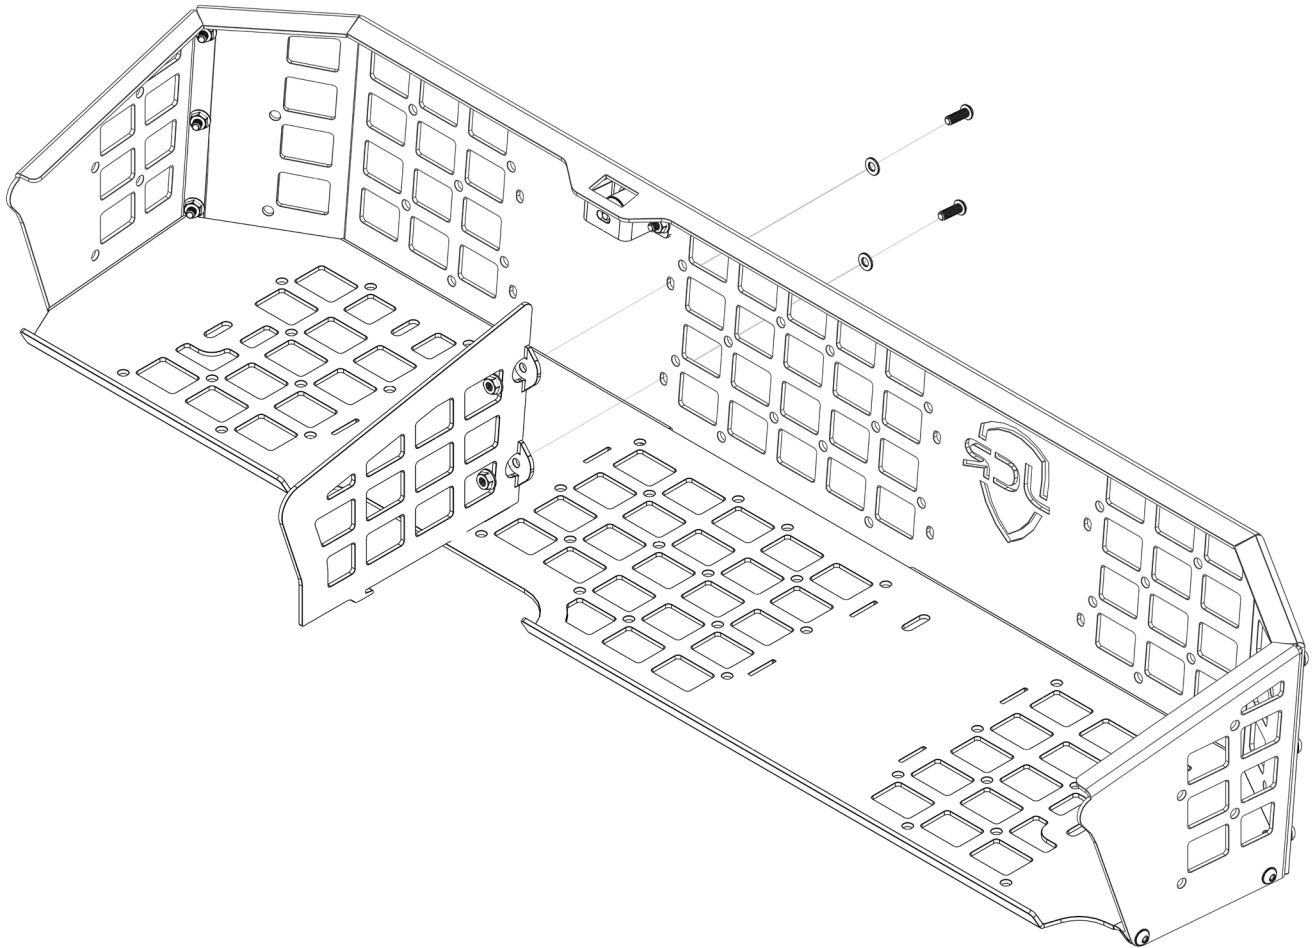

# ASSEMBLY

- 6** Next, place the basket in the Gladiator, lining the factory holes up with the mounting slots in the basket, and mount the basket using the factory hardware. Leave it a little loose for now in order to make mounting the latches easier.
- 7** Finally, mount the latch brackets to the bottom of the seats. For information on how to do this, please watch the instruction video on the product page.