




# XJ UPPER SHELF

## INSTALL INSTRUCTIONS

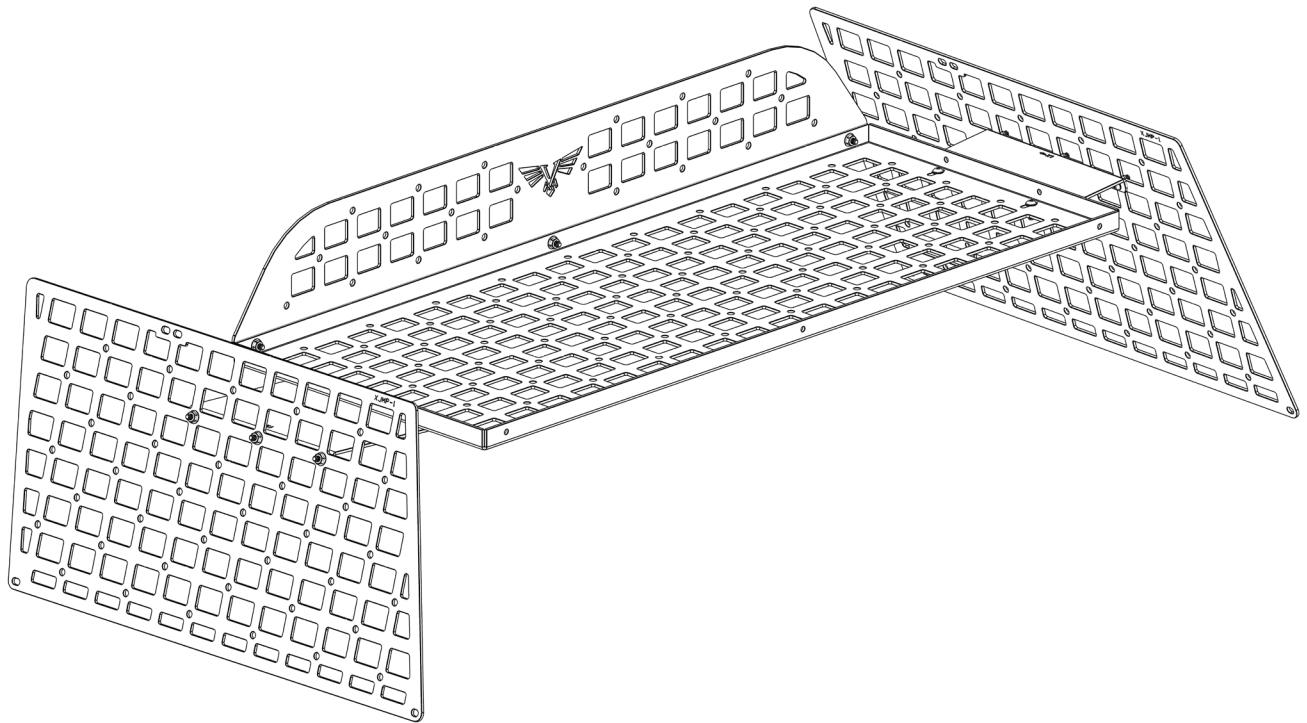


**Please read the mounting instructions below carefully before attempting to install.**

**Be sure to check out the install video on the product page, if available.**

Thank you for purchasing from Victory 4x4! Checkout our website, [victory4x4.com](http://victory4x4.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-459-8447!


# INCLUDED HARDWARE

13x

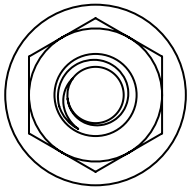


1/4"-20  
Serr. Flange Nut

113



1/4"-20 X 3/4"  
Button Head


13x

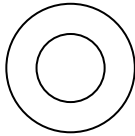


1/4"  
Washer

## INCLUDED PARTS


1x

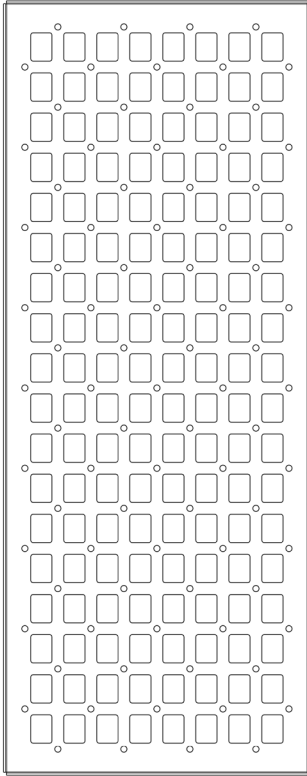

1x

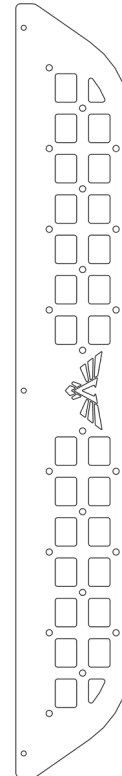


2x

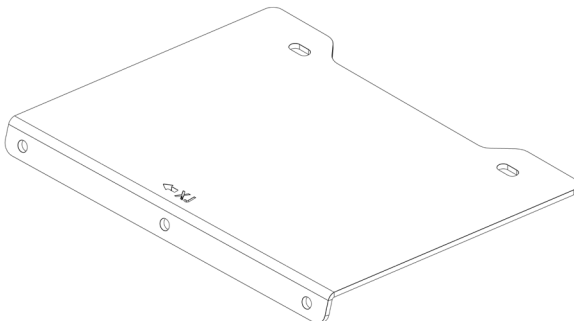


# INSTALLATION

- 1** Start by installing the mounts onto the Rear Window MOLLE Panels. Do this using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per mount. Mount them to the second row of holes from the top of the panels, using the second, third and fourth holes from the trunk of the vehicle.

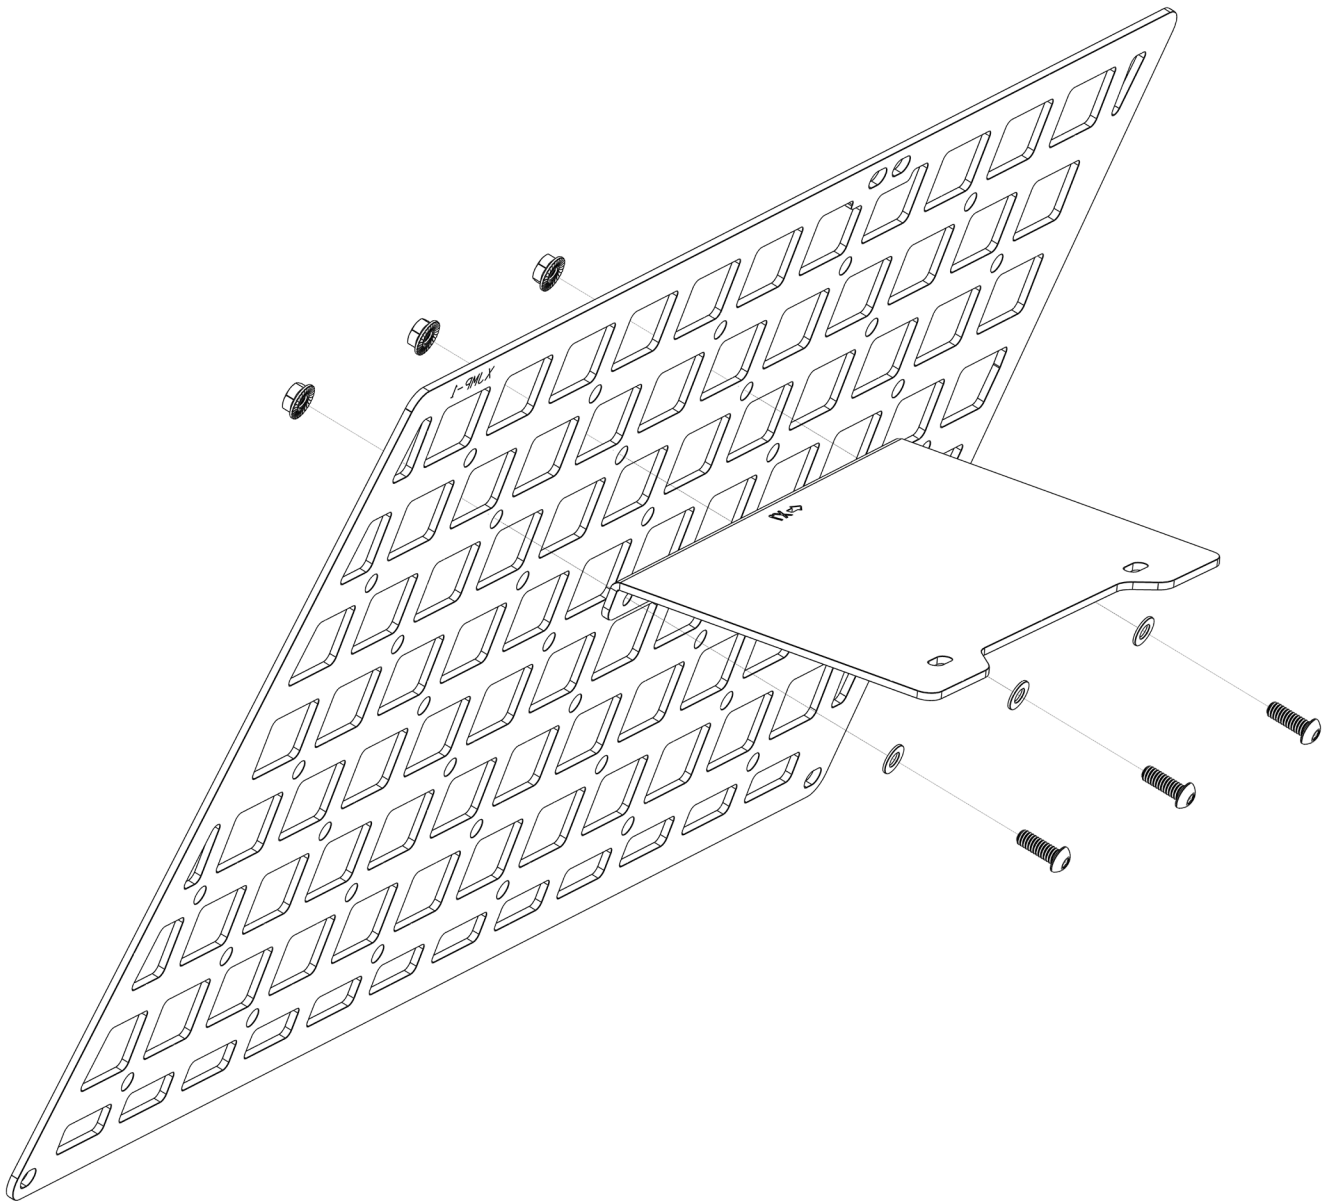

# INSTALLATION

- 2** Next, attach the front panel to the basket using three 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts.

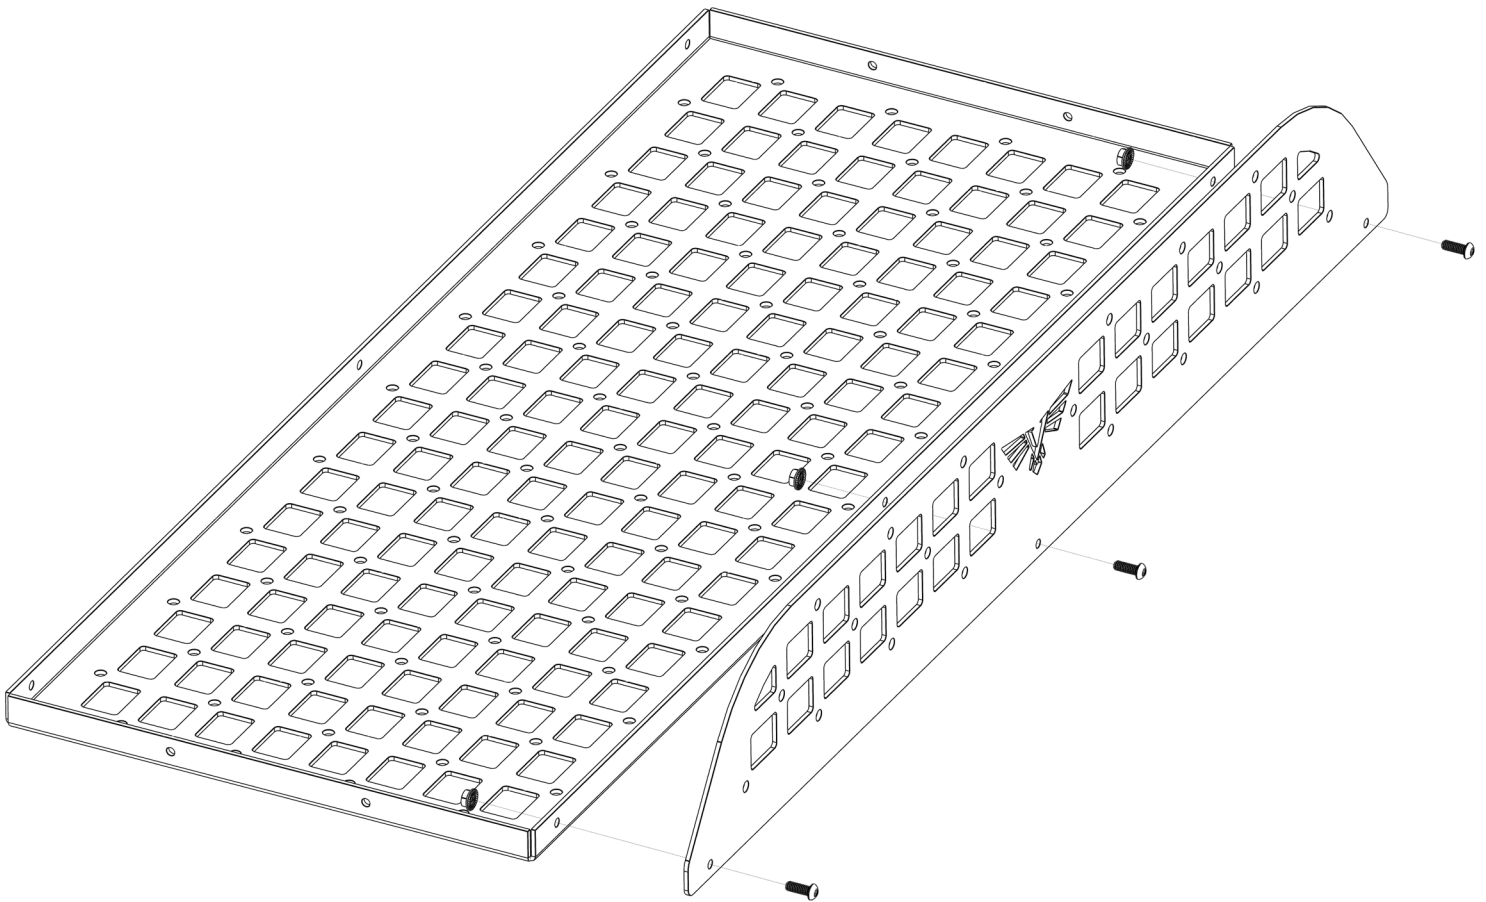

# INSTALLATION

- 3** Finally, raise the basket up between the two mounts and attach them together using two 1/4"-20 X 3/4" button head bolts, 1/4" washers and 1/4"-20 serr. flange nuts per side.

