



# JT CHASE RACK INSTALLATION INSTRUCTIONS

## TOOLS NEEDED

- 1/2" wrench or socket
- 3/16" Allen

## HARDWARE

- 5/16-18-3/4 Button Head (22)
- 5/16-18 Serrated Flange Nut (30)
- 1/4 USS Flat Washer (8)
- 5/16x1-1/4 Carriage Bolt (8)

**Please read the mounting instructions below  
carefully before attempting to install.**

Thank you for purchasing your new chase rack from JcrOffroad!  
Checkout our website, [www.jcroffroad.com](http://www.jcroffroad.com) for other great off-road products. Be sure to rate and review our product online. If you have any questions or are missing parts, please don't hesitate to call us at 269-353-1184!


- 1 The first step will be to install the side panels to the bedsides. You will have two types of mounts in your package. A clamping bracket (left) will be used if you do not have the Trail Rail bed rail system. This will clamp the rack directly to the bedside. A bed rail bracket (right) will be used if you have a Trail Rail bed rail system.



- 2 Install the clamp mounts on to the bottom of the each side panel (2 per side) with a carriage bolt, a washer, and a flange nut (2 per mount). The 90° bend should be at the bottom. If you are using the bed rail mounts, you will put two carriage bolts through the back of the mount and then slide it into the bed rail. You will then bolt the side panel onto the carriage bolts.



- 3** Place the side panel on the bedside, slide the clamping brackets up behind the edge of the bed rail as high as you can and snug up the nuts by hand to hold it in place.

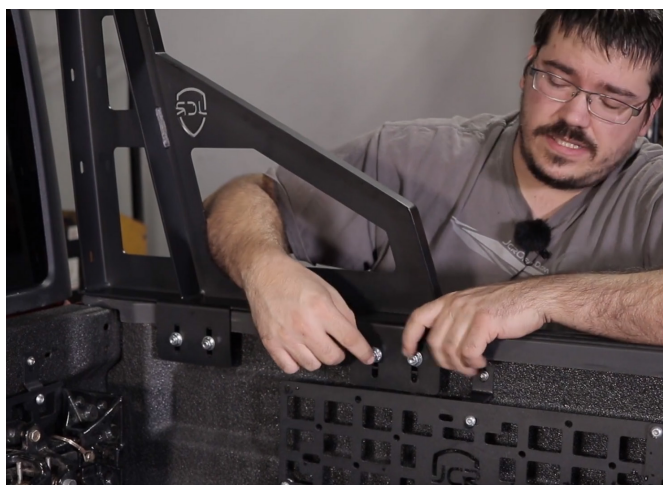

- 4** Now that both side panels are installed, place the crossbar between the two. Loosely install it with four button head bolts and flange nuts per side.



- 5** Position the Chase Rack where you want it front to back on the bed and fully tighten the bedside mounting brackets using a 1/2" socket or wrench. Ensure that the clamping brackets (if you are using them) are up as far as they will go behind the bedside.



- 6** Adjust the crossbar to align the side panels with the side of the cab. Tighten them down with a 3/16" allen key or bit.



- 7** That's it! Enjoy your new Chase Rack! Now mount your accessories (chase lights, bike fork mounts, etc.).